

**INSTALLATION AND OPERATION OF  
CM80i DUAL STATION SYSTEM**

**SECOND CONTROLLER**

A second controller may be fitted to the CM80i autopilot system. Each controller operates with equal priority. The system may be switched ON or OFF from either station, and both controllers show the same display.

A second controller is mounted as for the first controller (ref. section 3-2 of CM80i System Manual). A CM841 junction box must be used with a dual station system and the second station controller connects into the separate socket marked control 2.

